

Locker Shelf Instructions

Materials


4 Piano hinges - 4cm x 30 cm

Cut 2, $\frac{1}{2}$ " plywood boards 30cm x 80 cm. Sand smooth the edges and sides

Cut 2, $\frac{1}{2}$ " plywood boards 30cm x 27 cm. Sand smooth the edges and sides

Assembly

1. Measure and mark with a line across the width of the two 30 x 80 cm boards 26 cm up from the bottom on the inside of each board.
2. Measure and mark with a line across the width of the two 30 x 80 cm boards, 58 cm up from the bottom on the inside of each.
3. Stand the 30 x 80 cm boards parallel to one another, lengthwise leaving space in between to set in the smaller boards, which will be used as shelves. (Please see diagram)
4. Attach the bottom shelf at the 26 cm line using the piano hinges. The piano hinge on the right should be screwed into the top of the shelf. The hinge on the left should be installed under the shelf. (Please see diagram)
5. Attach the upper shelf at the 58 cm line using the piano hinges. The piano hinge on the right should be screwed into the top of the shelf. The hinge on the left should be installed under the shelf. (Please see diagram)

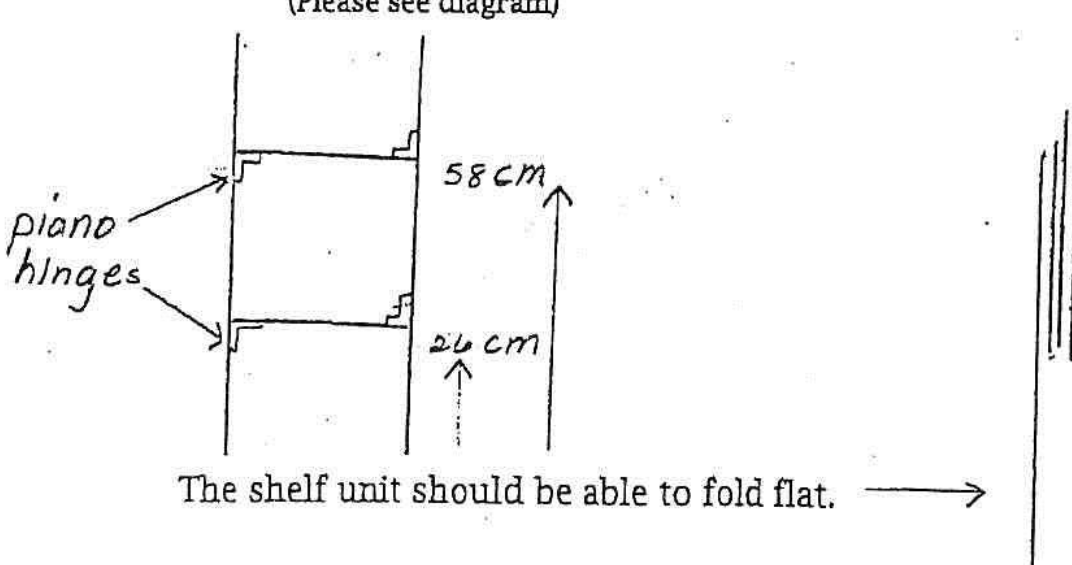

The shelf unit should be able to fold flat. →